

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Always distribute the load evenly over the surface of the wheelbarrow.
- x **DO NOT** overload the wheelbarrow.
- x **DO NOT** use wheelbarrow on uneven ground and do not run over curbs or steps - use a ramp.
- x **DO NOT** allow others to ride in the wheelbarrow.
- x **DO NOT** use the wheelbarrow if any part is damaged, paying particular attention to the wheel.
- x **DO NOT** inflate the tyre to more than 25psi.

2. CONTENTS

Heavy-duty galvanized steel wheelbarrow ideal for a wide range of gardening and light construction applications, as well as general domestic use. Constructed with strong tubular steel frame and rubber gripped handles. Fitted with 340mm pneumatic tyre.

- | | |
|--------------------|-----------------------|
| • Pan | Wheel assembly |
| • Frame x 2 | • Wheel |
| • Frame spacer x 2 | • Axle Bolt |
| • Pan support | • Axle Nut |
| • Bolt x 6 | • Axle Sleeve |
| • Nut x 6 | • Large Washer x 4 |
| • Washer x 6 | |

3. ASSEMBLY

- 3.1 Take the wheelbarrow pan and lean it up against a wall or use an assistant to hold it upon its end.
- 3.2 Next attach the frames to the underside of the pan. Ensure the end of the frame to which the wheel will attach, kicks outward as in fig.2.
- 3.3 Place a frame spacer between the frame and pan over the pre-drilled holes (fig.1).
- 3.4 Slide on washers and Insert the bolts through the spacer and frame and secure with nuts. Repeat for other frame.

NOTE: Only tighten finger tight at this time.

- 3.5 Place the pan support between the frame and pan where the two single drilled hole are, ensure the support is around the correct way and the kink follows the curve of the pan (fig.1).
- 3.6 Secure in place by feeding bolt through the pan, support, then frame and secure with nut.
- 3.7 Slide the axle sleeve through the centre of the wheel.
- 3.8 Slide one large washer onto the axle bolt, then insert through the frame another washer then through the wheel. Slide a washer onto the axle bolt then through the frame then the last washer and secure with the axle nut (fig.2).

NOTE: Ensure there is a washer either side of the frame (fig.2).

- 3.9 Tighten all nuts and bolts, be careful not to overtighten.

4. WHEELBARROW OPERATION

- 4.1 Check tyre pressure on a regular basis. Do not inflate above 25psi.
- 4.2 Do not overload the wheelbarrow and ensure that the load is evenly distributed before setting off.
- 4.3 Proceed at a safe speed especially at corners where there could be a danger of the load shifting.
- 4.4 Extra care should be taken on inclined surfaces.
- 4.5 Where there is a curb or step, a ramp should be used.
- 4.6 Periodically check all nuts and bolts are tight.

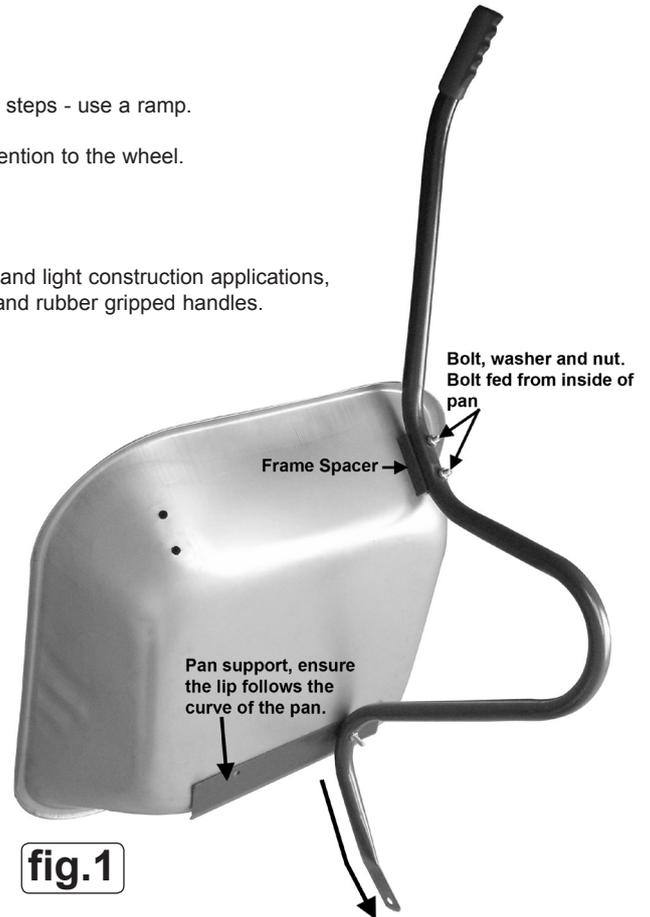


fig.1

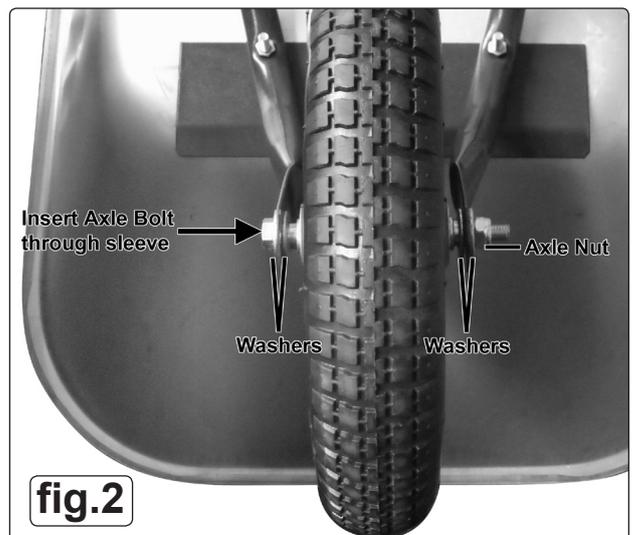


fig.2

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.